

# ECM888B

## 1/4" OMNIDIRECTIONAL CONDENSER MEASUREMENT MICROPHONE


### Description

The ECM888B is a 1/4" standard measurement microphone powered by an internal battery. There is no external power needed for easier connection to various devices such as a real time analyzer, PC, or palm-sized devices. Its wide and flat frequency response makes the ECM888B an ideal measurement and recording microphone.


### Features

- Metal structure with champagne silver finish.
- Wide frequency response from 20 Hz to 20 kHz.
- Suitable for spectrum analyzer, audio testing and measurement applications.
- Internal battery, 4LR44, 6V.
- 1/4" industrial standard diameter.

ECM888B Frequency Response (Omni)

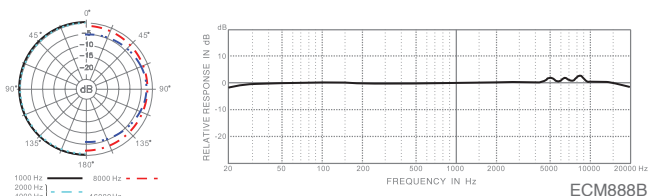

### Included

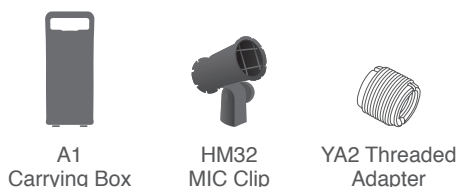

### Specifications

Type	Back electret Ø6 mm (Ø0.24")
Polar Pattern	Omni
Frequency Response	20 – 20,000 Hz
Sensitivity	-43 dBV/Pa (4 mV)
Output Impedance	800 Ω
Min. Load Impedance	3,000 Ω
S/N Ratio	72 dB
Equivalent Output Noise	22 dB
Max. SPL	132 dB
Dynamic Range	110 dB
Power Requirements	6 V 4LR44, 0.5 mA, > 200 Hours
Finish	Champagne Silver
Connector	XLR3M
Dimensions	Ø21 × 170 mm (Ø0.83" × 6.7")
Net Weight	150 g (5.3 oz.) (w/o Battery)

This information sheet contains important information for the safe use of the product. Read and follow the safety and handling instructions given here. Please keep this information sheet for future reference. If you pass on the product described overleaf, please enclose this information sheet.

## Safety instructions

### Intended use

This device converts acoustic signals in electrical signals. Any other use or use under the conditions excluded here is considered improper and can lead to personal injury or property damage. Neither the manufacturer nor the distributor is liable for damage resulting from improper use.

### Choking hazard for children



Make sure that plastic sleeves, packaging, etc. cannot get into the reach of babies and small children. Do not allow children to use electrical devices unsupervised. They could loosen parts of the product, then swallow them and choke on them!

### Place of operation

The device must not be used

- ▶ at particularly high temperatures or humidity
- ▶ in particularly dusty or polluted places
- ▶ in places where it can be exposed to moisture

### General handling

To prevent damage, never use force when handling the product. Never immerse the product in liquids. Just wipe it with a clean, dry cloth. Never use liquid cleaners such as benzene, thinner, or flammable detergents to clean the product.

## Disposal

### Old devices



Devices with this label are subject to the current EU directive on waste electrical and electronic equipment (WEEE directive) and may not be disposed of with household waste, but only via a suitable disposal company. Ask your local authority or your specialist dealer about your options for proper disposal.

### Packagings



Environmentally friendly materials have been selected for the packaging and are to be recycled. Do not just throw away plastic sleeves, packaging, etc., but recycle them. If necessary, note the instructions and labels on the packaging.